



***NOTE:**
Install the RECPs 3ft. (900mm) beyond the shoulders of the slope onto flat final grade. Secure roll end with a single row of staples on 1 ft. (300mm) centers.


For further information please refer to ECTC Installation Guidelines

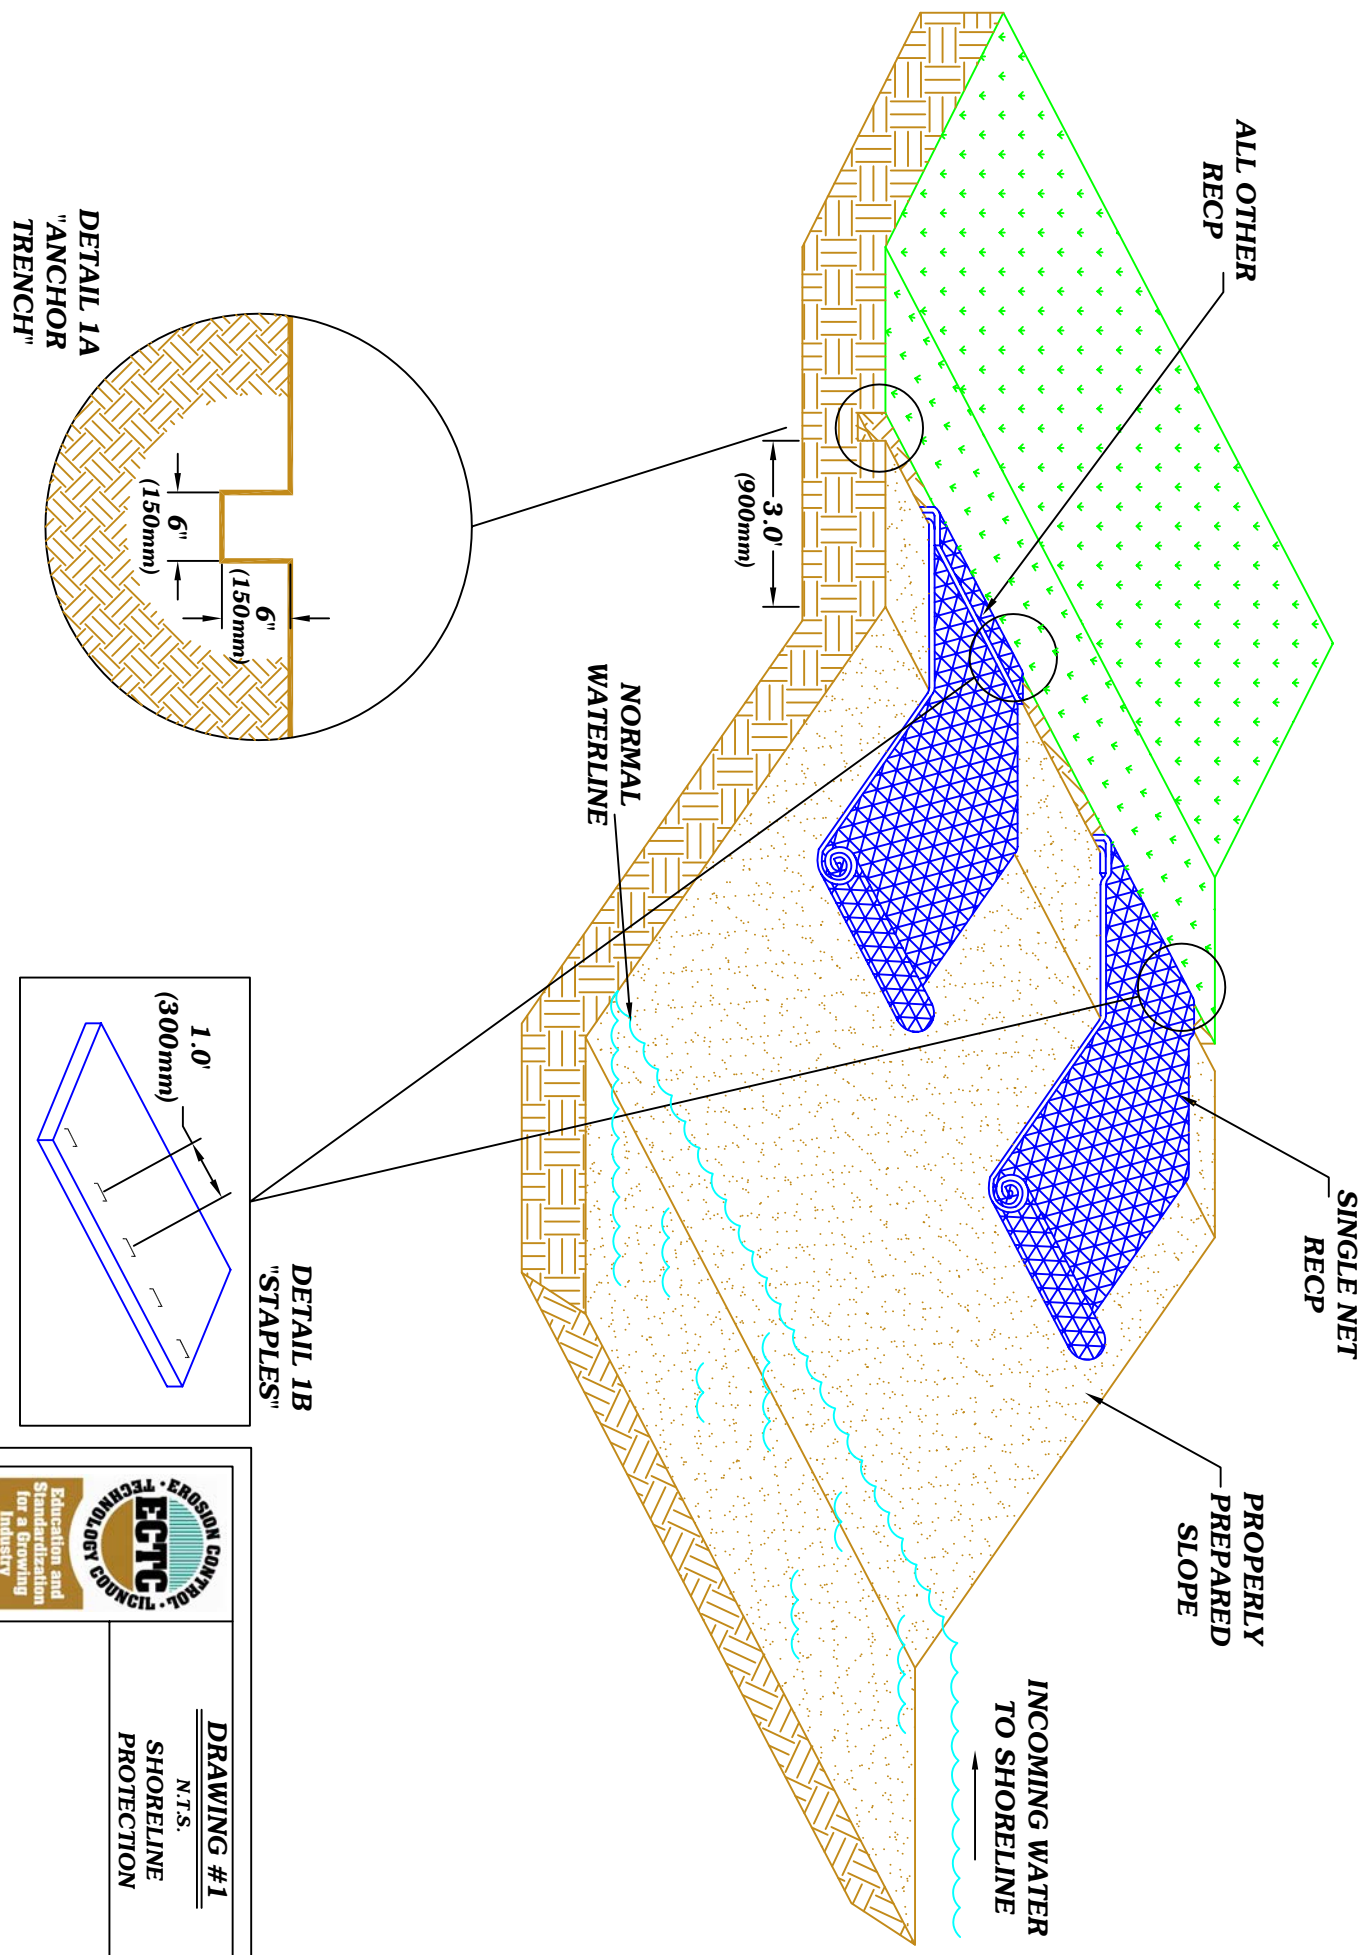

DETAIL 1A
"ANCHOR TRENCH"

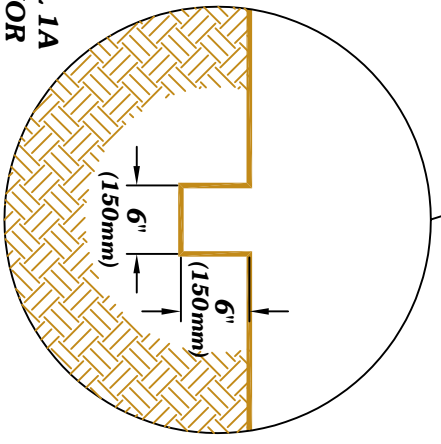

DETAIL 1B
"STAPLES"

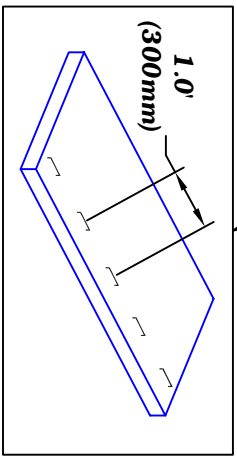

DRAWING #1
N.T.S.
SHORELINE PROTECTION